₹HRUST

by FemmeFunn®



THRUSTER BALLER USER MANUAL

THRUSTER BALLER

Our THRUST collection redefines realism by combining our innovative thrusting technology with the unbelievably realistic feel of our signature LIQUISILK™ liquid silicone. Immerse yourself in a new dimension of

feeling and sensations.

Features:



10 VIBRATION MODES



LIQUID



3 THRUSTING SPEEDS



100% WATERPROOF



1/2 INCH THRUST



USB RECHARGEABLE



BOOST MODE



REMOTE CONTROL

SPECIFICATIONS / DIMENSIONS



*Must fully Charge before the first use. Charging and use times are estimates only. Battery life varies over time, and all batteries experience a decline in useful life over time.

HOW TO USE

Toy with remote

- Press and hold button on toy for 1.5 second to get into standby mode.
- 2) Press button on remote once to cycle through different vibration modes.
- 3) When vibration mode is on, quickly press the button on remote twice to get into Boost mode. Toy will stay in Boost mode for 10 seconds, then return to previous vibration mode. Or quickly press button on remote twice to turn off the Boost mode.
- 4) Press (1) button on remote once to cycle through different thrusting speeds.
- 5) Press and hold button on remote for 1.5 seconds, and the toy can get into standby mode.
- 6) Press and hold **(b)** button on toy for 1.5 seconds to turn off.

Toy only

- 1) Press and hold **(b)** button on toy for 1.5 second to get into standby mode.
- 2) Press button once to cycle through different vibration modes.
- 3) When vibration mode is on, quickly press the button twice to get into Boost mode. Toy will stay in Boost mode for 10 seconds, then return to previous vibration mode. Or quickly press button twice to turn off the Boost mode.

- 4) Press button once to cycle through different thrusting speeds. Press and hold button for 1.5 seconds can turn off thrusting mode.
- 5) Press and hold **(b)** button on toy for 1.5 seconds to turn off.

CHARGING

- Completely dry toy and remote control before charging.
- Carefully plug charging cable into toy/remote until you hear a "click" sound. NOTE: Toy/remote must be placed on a flat surface for charger to connect properly.
- 3) Connect USB to power source. Flashing light on toy/remote means toy/remote is charging. Solid light on toy/remote means toy/remote is fully charged.
- Only use the original charger provided with toy and remote when charging.
- 5) Disconnect charger once toy and remote are fully charged. Do not leave charger connected if toy and/ or remote are fully charged. KEEPING THE CHARGER CONNECTED WHEN TOY AND/OR REMOTE ARE FULLY CHARGED MAY CREATE A FIRE HAZARD. Keep charger away from metal items.
- 6) Do not use toy and/or remote when it is charging.

CLEANING AND STORAGE

- 1) Completely dry toy and remote before charging.
- Always clean toy and remote before and after each use.
- ONLY use a toy cleaner specifically formulated to clean and sanitize adult toy products. After cleaning, rinse with warm water before use.
- 4) Allow toy and remote to air dry. Do not use any other means to dry the product and remote.
- This product and remote is NOT dishwasher safe. Do NOT place in a dishwasher, washing machine, dryer or similar appliance.
- 6) Store toy and remote in a cool, dry place.
- Use of any other cleaning products or methods may damage the product and remote and will invalidate your limited warranty. This product and remote are waterproof.

SAFETY

 This product is designed for your pleasure, however, we can only recommend external use. Internal use is always at your own risk.

- 2) For health reasons, do not share this product and remote with others. Such use is at your own risk.
- 3) This product and remote are WATERPROOF. Do not use it in water or immerse it in water. Use care when cleaning it, not to immerse it in water.
- 4) If using lubricant, use a water-based lubricant ONLY. DO NOT USE silicone-based lubricants, massage oils, hand creams, lotions, or similar non-water-based lubricants with this product.
- If you experience any discomfort, or notice any unusual medical symptoms after using this product, discontinue use immediately, and contact your doctor or other health professional.
- 6) If any part of the product and/or remote is damaged, immediately discontinue use, and contact us.
- 7) KEEP OUT OF REACH OF CHILDREN AND PETS.
- DO NOT attempt to take apart or disassemble the product and remote. Any such attempt voids any warranty.

Our products and materials are fully tested pursuant to California's Proposition 65, and meet or exceed the safety thresholds set by California, and are therefore exempt from Proposition 65 warnings.

LIMITED PRODUCT WARRANTY

Vvole and FemmeFunn® (collectively the "Company") expressly warrants to the original purchaser that, for a period of one (1) year from the date of purchase, the Femme Funn® product purchased ("Product") will be reasonably free of defects in materials and workmanship, and that when properly handled, will conform, within accepted tolerance, to applicable specifications. This Limited Warranty only applies to Company's Products which are used and maintained in the manner recommended by Company, Company, after confirming any claimed defect will replace Product without charge if the Product fails or does not perform as warranted solely due to a manufacturing defect within the warranty period, subject to the exclusions set forth in this Limited Warranty. Company shall not be responsible for the cost of returning Product to us. and Company shall not be responsible for any incidental damage to anything other than the product itself. During the entire one (1) year warranty, Company's obligation as to replacement shall further be limited to replacement with a similar style or model, if the exact Product is no longer available at the time of replacement. Any replaced product shall also remain subject to the original one (1) year warranty from the date of the original purchase, and replacement shall not extend the original warranty period in any manner or start a new warranty period. You may obtain coverage under this Limited Warranty by emailing Company at info@femmefunn.com, including your name and address, describing the issue, and including a copy of your proof of purchase from us or an authorized retailer. Once we receive via email a proof of purchase, we will provide

instructions on getting Product back to us. We will not accept any return without proof of purchase. This Limited Warranty is not transferable.

DISCLAIMER OF WARRANTIES

Company's Products must be stored, handled, used and maintained in accordance with instructions provided by Company, and this Limited Warranty is conditioned upon compliance with all such instructions. If you do not have a copy of Company's User Manual for Product, it is available from us by contacting us at info@femmefunn.com.

This Limited Warranty does not cover defects caused by:

- Non-compliance with Company's User Manual and other instructions. Such failures include, but are not limited to, exposure to physical abuse, including, but not limited to use in any manner not described in the User Manual, chemical abuse (e.g. use of harsh cleansers and solvents), thermal abuse or shock (e.g. excessive heat or cold);
- Improper storage, installation, handling, use and/or fabrication of the Product;
- Damage not resulting from manufacturing defects that occur while the Product is in the customer's possession;
- 4) Unreasonable or unintended use of Product;
- 5) Products used with known or visible manufacturing defects at the time of purchase;
- 6) Minor conditions such as stains, scratches, color variations;

7) Mere dissatisfaction with Product or its appearance. Any information or suggestion by Company with respect to the Products concerning applications, specifications or compliance with codes and standards is provided solely for your convenient reference and are made without any representation as to accuracy or suitability.

THE WARRANTIES SET FORTH HEREIN ARE THE ONLY WARRANTIES MADE BY COMPANY IN CONNECTION WITH THE PURCHASE AND USE OF COMPANY'S PRODUCTS. COMPANY CAN NOT AND DOES NOT MAKE ANY IMPLIED OR EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, AND DISCLAIMS ALL OTHER WARRANTIES. INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTARII ITY OR FITNESS FOR A PARTICULAR PURPOSE, PRODUCTS SOLD BY COMPANY ARE SOLD ONLY TO THE SPECIFICATIONS SPECIFICALLY SET FORTH BY COMPANY IN WRITING, OTHER THAN THE LIMITED WARRANTY SET FORTH HEREIN, COMPANY MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, COMPANY'S SOLE OBLIGATION LINDER THIS WARRANTY SHALL BE REPLACEMENT OF NON-CONFORMING PRODUCTS, OR AT THE OPTION OF COMPANY, A REPLACEMENT WITH THE SAME OR SIMILAR PRODUCT, BUYER ASSUMES ALL RISK WHATSOEVER AS TO THE RESULT OF THE USE OF THE PRODUCTS PURCHASED. WHETHER USED SINGULARLY OR IN COMBINATION WITH ANY OTHER PRODUCTS OR SUBSTANCES.

LIMITATION OF LIABILITY

No claim by the buver/owner of any kind, including claims for indemnification, shall be greater in amount than the purchase price of the Products in respect to which damages are claimed. IN NO EVENT SHALL COMPANY BE LIABLE TO BUYER/OWNER IN TORT, CONTRACT OR OTHERWISE, FOR ANY SPECIAL, INDIRECT, INCIDENTAL. CONSEQUENTIAL, RELIANCE, STATUTORY, SPECIAL. PUNITIVE OR EXEMPLARY DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, LOSS OF USE, LOSS OF TIME, LOSS OF REVENUES, INCONVENIENCE, LOSS BUSINESS OPPORTUNITIES, DAMAGE TO GOOD WILL OR REPUTATION, OR LOSS OF DATA, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR SUCH DAMAGES COULD HAVE BEEN REASONABLY FORESEEN. IN CONNECTION WITH, ARISING OUT OF, OR AS A RESULT OF. THE SALE, DELIVERY, SERVICING, USE OR LOSS OF USE OF THE PRODUCTS SOLD HEREUNDER, OR FOR ANY LIABILITY OF BUYER TO ANY THIRD PARTY WITH RESPECT THERETO

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

CONTACT INFORMATION

Any question concerning this warranty should be addressed to Vvole at info@femmefunn.com



www.femmefunn.com

© FemmeFunn. All Rights Reserved.